


BOSS®

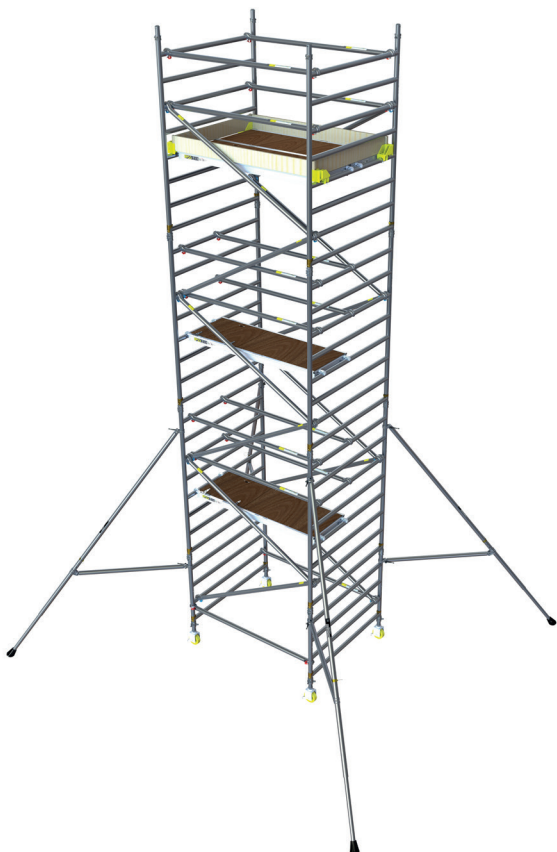

CLIMA 3T

Mobile Aluminium Tower with
Climbing Frame 1450/850

3T - Through the Trapdoor Method

USER GUIDE

Safety First

Mobile Towers - 3T Method

Introduction

Please read this user guide carefully.

Please note that diagrams are for illustrative purposes only.

User guides are also available to download from our website at bossacesstowers.com.

BoSS mobile aluminium towers are light-weight scaffold towers used throughout the building and construction industry for both indoor and outdoor access solutions where a stable and secure platform is required. Ideal for maintenance and installation work or short-term access, the highly versatile towers provide a strong working platform for a variety of heights.

This user guide provides you with step by step instructions to ensure your system is erected easily and safely, using the 3T (Through The Trapdoor) method.

The law requires that personnel erecting, dismantling or altering towers must be competent. Any person erecting a BoSS mobile tower must have a copy of this user guide. For further information on the use of mobile access and working towers consult the PASMA operators code of practice.

If you need further information, design advice, additional user guides or any other help with this product, please contact the manufacturer on **+44 (0)1621 745900** or email **uk.customercare@wernerco.com**.

Compliances

The BoSS Clima aluminium system has been tested and certified to EN 1004: 2004 Class 3



User Guide EN 1298-IM-EN

Preparation and inspection

Inspect the equipment before use to ensure that it is not damaged and that it functions properly. Damaged or incorrect components should not be used.

Safety First

Safe use

- Check that all components are onsite, undamaged and that they are functioning correctly - (refer to Checklist and Quantity Schedules). Damaged or incorrect components should not be used.
- Check if the ground on which the mobile access tower is to be erected and moved is capable of supporting the tower.
- The safe working load is 275kgs (606lbs) per platform level, uniformly distributed up to a maximum of 950kgs (2100lbs) per tower (including self weight).
- Towers must always be climbed from the inside using the built-in ladder during assembly and use.
- It is recommended that towers should be tied to a solid structure when left unattended.
- Adjustable legs should only be used for levelling.

Lifting of equipment

- Tower components should be lifted using a reliable lifting material (e.g. strong rope) employing a reliable knot (e.g. clove hitch) to ensure safe fastening and always lift within the footprint of the tower.
- Assembled mobile towers should not be lifted with a crane or other lifting devices.

Safety First

Stabilisers/ballast

- Stabilisers or outriggers and ballast weights should always be fitted when specified.
- The Quantity Schedules show the recommended stabilisation. In circumstances where there is restricted ground clearance for stabilisers/outriggers, contact your supplier for advice. Ballast must be made up of solid materials (i.e. not water or loose sand) and should not be positioned to overload individual legs. Ballast should be secured against accidental removal where practicable, and be supported on the lowest rung of the bottom frame.

Movement

- The tower should only be moved by manual effort, and only from the base.
- Beware of live electrical apparatus when moving the tower (particularly overhead), plus wires or moving parts of machinery.
- No person or materials should be on the tower during movement.
- Caution should be exercised when wheeling a tower over rough, uneven or sloping ground, taking care to unlock and lock castors. If stabilisers are fitted, they should only be lifted a maximum of 25mm above the ground to clear ground obstructions.
- The overall height of the tower when being moved should not exceed 2.5 times the minimum base dimensions, or 4 metres overall height.
- Before use, check that the tower is still correct and complete.
- After every movement of the tower, use a spirit level to check that it is vertical and level and set the adjustable legs as required.
- Do not move the tower in wind speeds over 7.7 metres per second (17mph).

Safety First

During use

- Beware of high winds in exposed, gusty or medium breeze conditions. We recommend that in wind speeds over 7.7 metres per second (17mph), cease working on the tower and do not attempt to move it. If the wind becomes a strong breeze (expected to reach 11.3 metres per second - 25mph) tie the tower to a rigid structure. If the wind is likely to reach gale force (over 18 metres per second - 40mph), the tower should be dismantled.

Wind description	Beaufort scale	Beaufort No.	Speed in mph	Speed in m/sec
Medium Breeze	Raises dust and loose paper, twigs snap off	4	8-12	4-6
Strong Breeze	Large branches in motion, telegraph wires whistle	6	25-31	11-14
Gale Force	Walking is difficult	8	39-46	17-21

- Beware of open ended buildings, which can cause a funnelling effect.
- Do not abuse equipment. Damaged or incorrect components should not be used.
- Raising and lowering components, tools, and/or materials by rope should be conducted within the lower base. Ensure that the safe working load of the supporting decks and the tower structure is not exceeded.
- The assembled tower is a working platform and should not be used as a means of access or egress to other structures.
- Beware of horizontal forces (e.g. power tools) which could generate instability. **Maximum horizontal force 30kg.**
- The stairway towers, (featuring an inclined staircase access) are for frequent use by personnel carrying tools and/or materials.
- Mobile towers are not designed to be suspended - please refer to your supplier for advice.
- Do not use boxes or stepladders or other objects on the platform to gain extra height.

Safety First


Ties

- Ties should be used when the tower goes beyond its safe height, beyond the limits of the stabilisers/outriggers or if there is a danger of instability. They should be rigid, two way ties fastened to both uprights of the frame with load-bearing right angled or swivel couplers. Only couplers suitable for the 50.8mm diameter tube of the tower should be used. Ideally, ties should be secured to both faces of a solid structure by means of anchorages.
- The tie frequency may vary depending on the application, but they should (at a minimum) be every 4 metres in height.
- For further information on tying-in a tower please contact your supplier or BoSS.

Maintenance - storage - transport

- All components and their parts should be regularly inspected to identify damage; particularly to joints. Lost or broken parts should be replaced, and any tubing with indentation greater than 5mm should not be used and put to one side for manufacture repair. Adjustable leg threads should be cleaned and lightly lubricated to keep them free running.
- Brace claws, frame interlock clips, trapdoor latches and platform wind-locks should be regularly checked to ensure they lock correctly.
- Refer to the BoSS user guide for detailed inspection and maintenance advice.
- Components should be stored with due care to prevent damage.
- Ensure components are not damaged by excessive strapping forces when transported.

Safety First

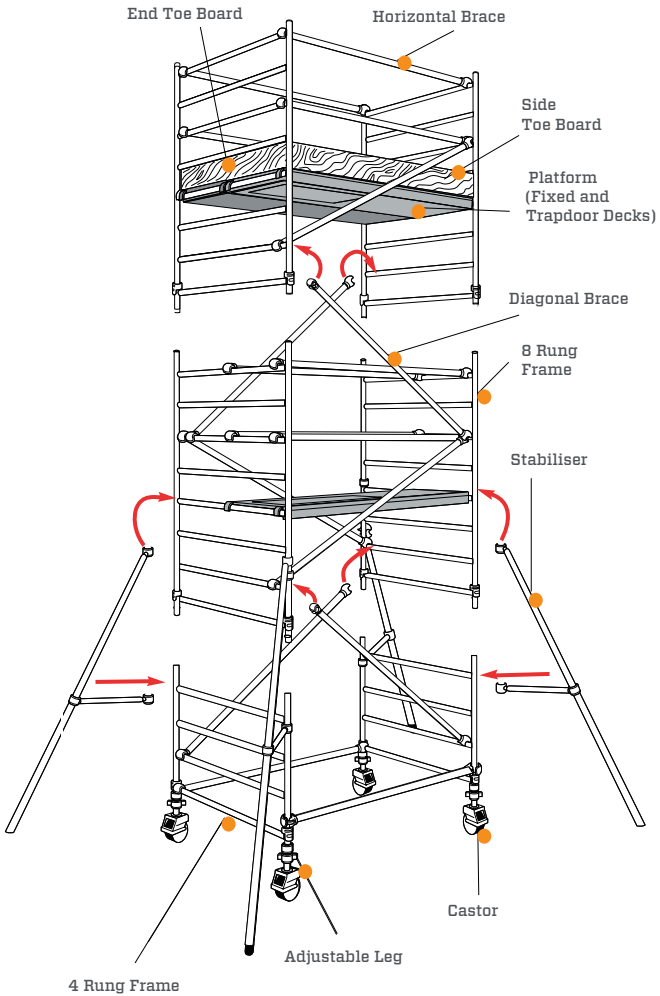

Quantity Schedule

1450 width towers

BoSS Clima 1450 to EN 1004: Available in 2 lengths - 1.8m and 2.5m. Internal/external use - towers under 2.5m are outside of the scope of EN 1004

Component	Internal or external use										Internal use only													
	Working height (m)	3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2	12.7	13.2	13.7	14.2
Platform height (m)	1.2	1.7	2.2	2.7	3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2	
125/150/200mm Castor	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
250mm Adjustable Leg	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
1450 4 Rung Frame		2	2			2	2			2	2			2	2			2	2			2	2	
1450 6 Rung Frame		2				2				2				2				2				2		
1450 8 Rung Frame		2	2	2	2	4	2	4	4	2	4	4	6	4	6	8	8	6	8	10	8	10	10	12
1.8m / 2.5m Fixed Deck	1	1	1*	2	1	1	1	1	2	1	1	2	1	1	1	2	1	1	1	1	1	2	1	1
1.8m / 2.5m Trap Deck	1	1	1	1	2	2	2	2	2	3	3	3	3	3	3	4	4	4	4	4	5	5	6	6
1.8m / 2.5m Horizontal Brace (Red)	6	6	6	6	10	10	10	10	14	14	14	14	14	14	14	18	18	18	18	18	22	22	22	26
2.1m / 2.7m Diagonal Brace	2	3	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	20	21	22	23

IMPORTANT: Please ensure you also read the [Quantity Schedule on page 8](#)

*If you are unable to position the working platform easily from the ground, you may height. require an additional fixed platform for this tower weight

Quantity Schedule

1450 width towers

BoSS Clima 1450 to EN 1004: Available in 2 lengths - 1.8m and 2.5m. Internal/external use - towers under 2.5m are outside of the scope of EN 1004

Component	Internal or external use										Internal use only												
	3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2	12.7	13.2	13.7	14.2
Working height (m)	1.2	1.7	2.2	2.7	3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2
Platform height (m)	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
1.8m / 2.5m Side Toe Board	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
1.2m End Toe Board	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
Toe Board Holder	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
SP7 Fixed Stabiliser				4	4	4	4	4	4														
SP10 Telescopic Stabiliser										4	4	4	4	4	4	4	4	4	4	4	4	4	4
SP15 Telescopic Stabiliser															4								
Total Tower Self-Weight (kgs) 1.8m	93	101	106	150	165	174	180	201	216	238	244	265	280	288	310	316	331	339	346	367	382	390	397
Total Tower Self-Weight (kgs) 2.5m	110	118	123	173	190	198	206	232	249	271	278	305	322	330	352	364	381	390	397	424	441	449	456

IMPORTANT: Please ensure you also read the Quantity Schedule on page 8

*If you are unable to position the working platform easily from the ground, you may height. require an additional fixed platform for this tower weight

Quantity Schedule

1450 width towers

Number of working platforms allowed

The MAXIMUM SAFE WORKING LOAD (the combined weight of the users, tools and materials) that may be placed on the tower is the total weight less than the self-weight of the tower. The total weight for the towers shown in the schedule is 950kg.

Example 1:

A 1450 tower built using the 3T method with a 4.2m platform height and a platform length of 1.8m has a self-weight of 180kg.

950kg total weight - 180kg self-weight = 770kg maximum safe working load (users, tools and materials).

Example 2:

A 1450 tower built using the 3T method with a 11.7m platform height and a platform length of 2.5m has a self-weight of 449kg.

950kg total weight - 449kg self-weight = 501kg maximum safe working load (users, tools and materials).

For greater heights and loads, consult the manufacturer for guidance.

Platform loading

On a 1450 tower, a platform may comprise of a single deck or two decks placed side by side. The maximum safe working load (the combined weight of the users, tools and materials) that may be placed on a platform is 275kg. This must be evenly distributed over either one deck, or two decks placed side by side.

The quantities on pages 7 and 8 will enable BoSS towers to be built safely and therefore comply with the requirements of the Work at Height Regulations. They include double guardrails to all platforms. Toe boards will need to be added if any levels are used as working platforms and for storage of materials.

EN 1004 requires platforms at least every 4.2m, and these measures will exceed that requirement.

Quantity Schedule

1450 width towers

Ballast: internal/external use

There is no requirement for ballast on 1450 towers if using stabilisers as detailed in the table on page 8.

Mobile outriggers


MP16 outriggers can be used instead of SP15 stabilisers, as detailed below. Mobile outrigger kits comprise of:

Mobile outrigger kit	
MP16 Mobile Outrigger	4
125/150/200mm Castor (Use same diameter castors as on tower)	4
250mm Adjustable leg	4
Plan Braces	4
The above components replace: SP15 Stabiliser	4

Stabilisers

To improve rigidity, larger stabilisers can be used at a lower level than shown in the table on page 8.

Angle of stabiliser 1450 tower

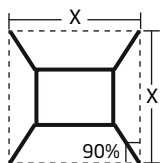

Double width 1450 towers dimension x

	Platform length 1.8m	Platform length 2.5m
SP7	X= 3351	X= 3629
SP10	X= 4789	X= 5100
SP15	X= 5520	X= 5838

Quantity Schedule

850 width towers

BoSS Clima 850 to EN 1004: Available in 2 lengths - 1.8m and 2.5m. Internal/external use - towers under 2.5m are outside of the scope of EN 1004

Component	Internal or external use										Internal use only													
	3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2	12.7	13.2	13.7	14.2	
Working height (m)	1.2	1.7	2.2	2.7	3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2	
Platform height (m)	1.2	1.7	2.2	2.7	3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2	
125/150/200mm Castor	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
250mm Adjustable Leg	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
850 4 Rung Frame	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
850 6 Rung Frame	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
850 8 Rung Frame	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
1.8m / 2.5m Trap Deck	1	1	1*	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
1.8m / 2.5m Horizontal Brace (Red)	6	6	6	6	10	10	10	10	14	14	14	14	14	14	18	18	18	18	18	18	18	18	18	18
2.1m / 2.7m Diagonal Brace	2	3	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	23
1.8m / 2.5m Side Toe Board	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
0.6m End Toe Board	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2

IMPORTANT: Please ensure you also read the Quantity Schedule on page 12.

* If you are unable to position the working platform easily from the ground, you may require an additional fixed platform for this tower height.

Quantity Schedule

850 width towers

BoSS Clima 850 to EN 1004: Available in 2 lengths - 1.8m and 2.5m. Internal/external use - towers under 2.5m are outside of the scope of EN 1004

Component	Internal or external use										Internal use only																																									
	Working height (m)		3.2		3.7		4.2		4.7		5.2		5.7		6.2		6.7		7.2		7.7		8.2		8.7		9.2		9.7		10.2		10.7		11.2		11.7		12.2		12.7		13.2		13.7		14.2					
Platform height (m)	1.2	1.7	2.2	2.7	3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2	12.7	13.2	13.7	14.2	14.7	15.2	15.7	16.2	16.7	17.2	17.7	18.2	18.7	19.2	19.7	20.2	20.7	21.2	21.7	22.2	22.7	23.2	23.7	24.2					
Toe Board Holder	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4				
SP7 Fixed Stabiliser			4	4	4	4	4																																													
SP10 Telescopic Stabiliser											4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	
SP15 Telescopic Stabiliser																																																				
Total Tower Self-Weight (kgs) 1.8m	72	79	105	125	139	145	151	184	197	203	209	244	257	263	269	274	288	294	314	334	347	354	359																													
Total Tower Self-Weight (kgs) 2.5m	83	90	117	142	158	165	171	209	225	232	238	277	293	300	306	317	332	339	360	385	401	408	414																													

IMPORTANT: Please ensure you also read the Quantity Schedule on page 11.

* If you are unable to position the working platform easily from the ground, you may require an additional fixed platform for this tower height.

Quantity Schedule

850 width towers

Number of working platforms allowed

The MAXIMUM SAFE WORKING LOAD (the combined weight of the users, tools and materials) that may be placed on the tower is the total weight less the self-weight of the tower. The total weight for the towers shown in the schedule is 950kg.

Example 1:

An 850 tower built using the 3T method with a 4.2m platform height and a platform length of 1.8m has a self-weight of 151kg.

950kg total weight - 151kg self weight = 799kg maximum safe working load (users, tools and materials).

Example 2:

An 850 tower built using the 3T method with a 11.7m platform height and a platform length of 2.5m has a self-weight of 408kg.

950kg total weight - 408kg self-weight = 542kg maximum safe working load (users, tools and materials).

For greater heights and loads, consult your supplier for guidance.

Platform loading

On an 850, tower a platform comprises of a single deck only. The maximum safe working load (the combined weight of the users, tools and materials) that may be placed on a platform is 275kg, evenly distributed over the deck.

The quantities on pages 11 and 12, will enable BoSS towers to be built safely and therefore comply with the requirements of the Work at Height Regulations 2005. They include double guardrails to all platforms, and toe boards will need to be added if any levels are used as working platforms and for storage of materials.

EN 1004 requires platforms at least every 4.2m, and these measures will exceed that requirement.

Quantity Schedule

850 width towers

Ballast: internal/external use

There is no requirement for ballast on 850 towers if using stabilisers as detailed in the table on page 12.


Mobile outriggers

MP16 outriggers can be used instead of SP15 stabilisers, as detailed below. Mobile outrigger kits comprise:

Mobile outrigger kit	
MP16 Mobile Outrigger	4
125/150/200mm Castor (Use same diameter castors as on tower)	4
250mm Adjustable leg	4
Plan Braces	4
The above components replace: SP15 Stabiliser	4

Stabilisers

To improve rigidity, larger stabilisers can be used at a lower level than shown in the table on page 12.

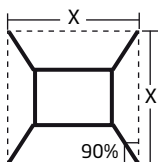

Single width 850 towers dimension x

	Platform length 1.8m	Platform length 2.5m
SP7	X= 2994	X= 3201
SP10	X= 4458	X= 4734
SP15	X= 5195	X= 5485

Stabiliser feet should form a square as shown in the diagram and table above.

Assembly Procedure

Mobile towers - 3T method

Assembly and dismantling procedures

When building a boss tower:

- To comply with the Work at Height Regulations we show assembly procedures with platforms every 2 metres in height, and, the locating of guardrails in advance of climbing onto a platform to reduce the risk of a fall.
- All platforms feature double guardrails on both faces of either individual platforms or fully decked levels.
- All guardrails should be 2 and 4 rungs (0.5m and 1.0m) above platforms.
- Never stand on an unguarded platform positioned above the first rung of a tower. If your risk assessment shows it necessary, you may also need to guardrail platforms at this level.
- Always start building with the smallest height frames at the base of the tower:

Platform height in metres	Frame at base
1.7, 2.2, 3.7, 4.2, 5.7, 6.2, 7.7, 8.2, 9.7, 10.2, 11.7, 12.2	4 rung
2.7, 4.7, 6.7, 8.7, 10.7	6 rung
1.2, 3.2, 5.2, 7.2, 9.2, 11.2	8 rung

Where all three frame heights are used in a tower, start with 4 rung frames at the base, with the 6 rung frames next and the 8 rung frames on the top. Refer to the quantity schedules for detail.

To dismantle a Boss Ladderspan tower


- Remove toe boards, and pass down the tower.
- Unclip farthest end of braces and immediately go to protected trapdoor position on ladder to complete removal.
- Remove upper platforms from protected platform levels below.
- Pass removed components out of the tower to a colleague.

Safety Checklist

Mobile towers - 3T method

Checklist

Ensure all brace claws operate and lock correctly prior to erection	✓
Inspect components prior to erection	✓
Inspect tower prior to use	✓
Tower upright and level	✓
Castors locked and legs correctly adjusted	✓
Diagonal braces fitted	✓
Stabilisers/outriggers fitted as specified	✓
Platforms located and wind-locks on	✓
Toe boards located	✓
Check guardrails are fitted correctly. See illustration below.	✓

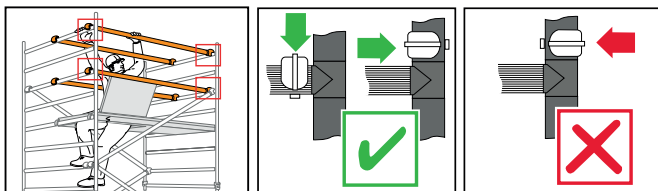

Ensure horizontal braces and guardrails are fitted correctly. Always fit as shown.

Refer to this checklist before using each time.

Assembly Procedure

Mobile towers - 1450 3T method

Assembly for 1450 towers


Always start building with the smallest height frames at the base of the tower:

Platform height in metres	Frame at base
1.7, 2.2, 3.7, 4.2, 5.7, 6.2, 7.7, 8.2, 9.7, 10.2, 11.7, 12.2	4 rung
2.7, 4.7, 6.7, 8.7, 10.7	6 rung
1.2, 3.2, 5.2, 7.2, 9.2, 11.2	8 rung

Where all three frame heights are used in a tower, start with 4 rung frames at the base, with the 6 rung frames next and the 8 rung frames on the top. Refer to the Quantity Schedules for detail. The procedure illustrated shows 4.2m platform height tower starting with a 4 rung frame.

BoSS recommend two persons are used to build BoSS Towers. Above 4m height, it is essential that at least two persons are used. Only climb the tower from the inside.


- 1 Push four castors onto four adjustable legs. Insert adjustable legs into two end frames as shown. Lock castor brakes. Base plates can be fitted to adjustable legs if it is not necessary to move the tower.

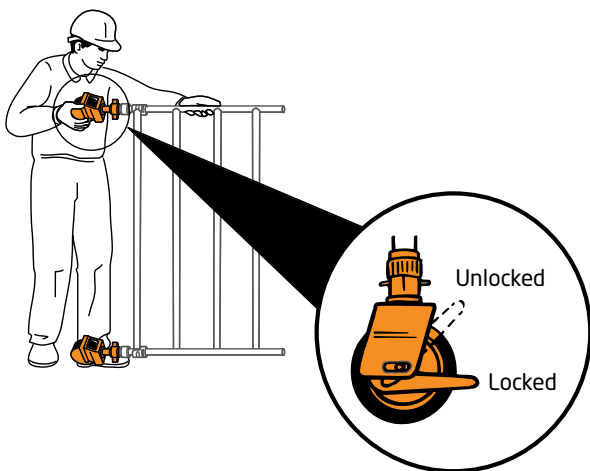


Assembly Procedure

- 2** Fit one horizontal brace (red) onto the vertical of an end frame, just above the bottom rung, with the claw facing outwards.

Note: All locking claws must be opening before fitting.

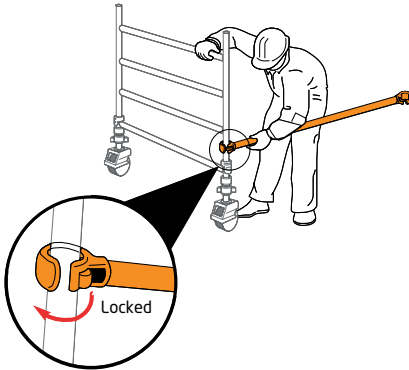


- 3** Position the second end frame as shown and at the other end of the horizontal brace onto the vertical, just above the bottom rung. Fit a second horizontal brace between the bottom rungs on the other side of the frames to square the tower.

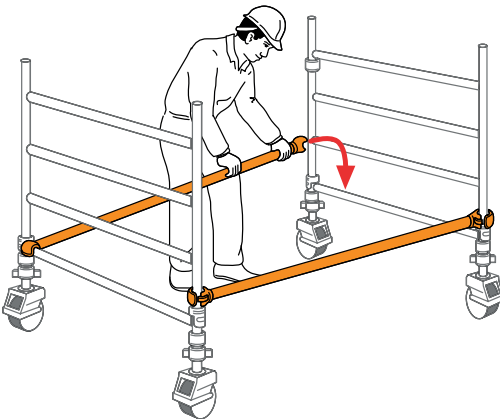


Assembly Procedure

4 Fit two additional end frames and check that the frame interlock clips are engaged. Fit two diagonal braces (blue) in opposing directions between the 2nd and the 6th rungs. Ensure the frames are vertical and level by checking with a spirit level and setting the adjustable legs as required.

IMPORTANT - Only use the adjustable legs to level the tower and not to gain extra height.

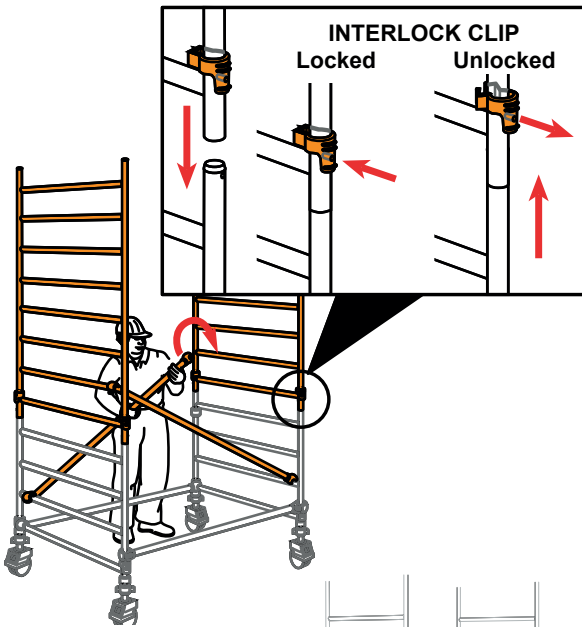

Fit stabilisers
(see notes on page 30)

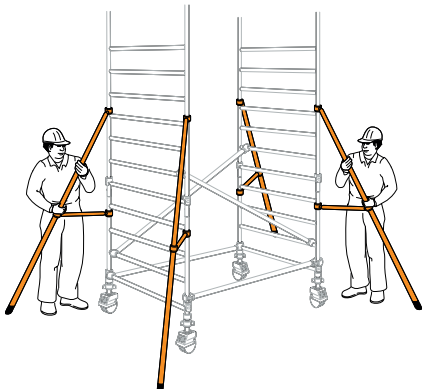

Assembly Procedure

5 Fit a temporary deck on the lowest rungs. Fit a trapdoor deck on the 8th rung (2.0m) on one side of the tower. Ensure that the trapdoor is positioned with the hinges towards the outside of the tower as shown. Climb the end frame below the trapdoor on the inside of the tower, and from within the protected trapdoor position, fit horizontal braces on the 10th and 12th rungs (in that order) on both sides of the deck.

Do not climb onto the deck until all guardrails are in place.


When horizontal braces are fitted as guardrails, they should be 0.5m and 1.0m (2 and 4 rungs) above the deck level.

Remove the temporary deck from the lowest rung.




Assembly Procedure

- 6** Fit the next pair of diagonal braces in opposing directions between the 6th and 10th rungs add two additional end frames.

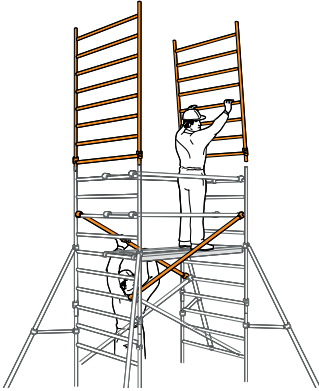


- 7** Add two more diagonal braces between the 10th and 14th rungs. If finishing at this height (4.2m platform), the fixed deck should be repositioned to the 16th rung on the opposite side of the tower to the trapdoor deck. Fit a trapdoor deck alongside it with the hinges towards the outside of the tower and the trapdoor in line with the one below. Climb the tower and from the protected trapdoor position, fit the horizontal braces as guardrails on both sides at 2 and 4 rungs (0.5 and 1.0m) above the platform level. At the final level, a further diagonal braces should be added on one side of the tower as shown.

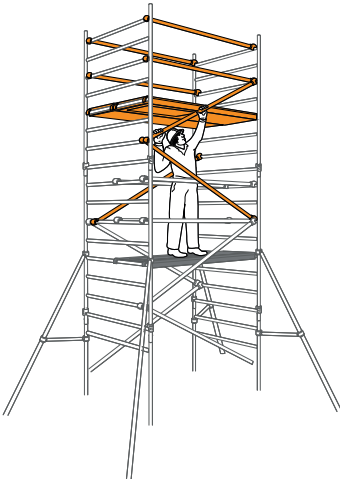

Assembly Procedure

When building beyond a 4.2m platform height.


- 8** Continue to add pairs of end frames, diagonal braces and fit trapdoor decks as shown in the previous steps. At every platform level, add horizontal braces as guardrails at 2 and 4 rungs above the platform. Fit these guardrail braces from the protected trapdoor position. Do not climb onto the platform until all guardrails are in place.

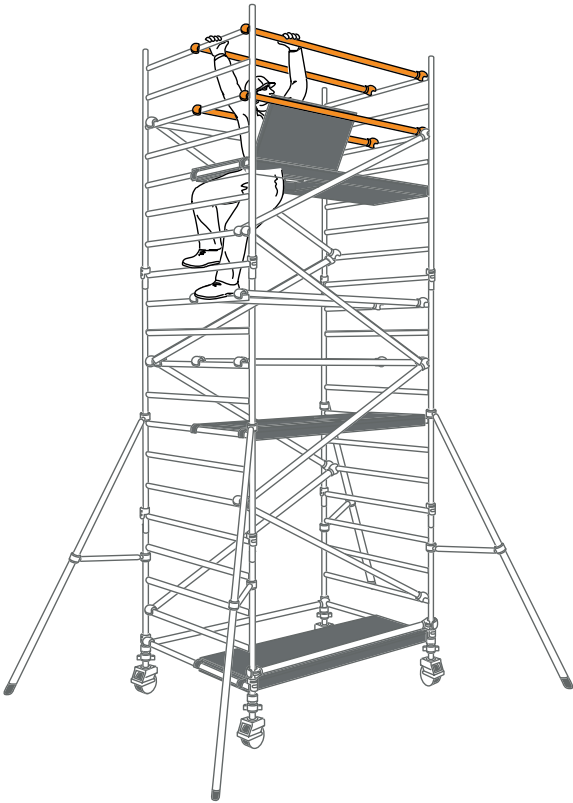

Continue until the required height is reached. Re-position the fixed deck to the required platform height and fit a trapdoor deck alongside it as shown in Stage 7. Fit the guardrails as shown in Stage 7.


Assembly Procedure

- 9** Fit toe boards (see Instructions on page 29).
The tower is now complete.

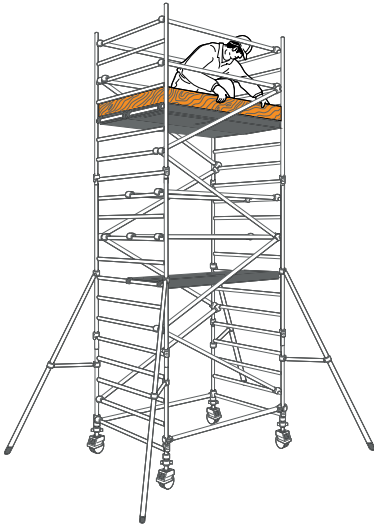

Dismantling procedure

- 10** To take down the tower, reverse the building sequence. When removing guardrail braces, unlock the claws furthest from the trapdoor and then return immediately to the protected position within the trapdoor. You may then unlock the claws at the other ends of the guardrails to remove them from the tower.

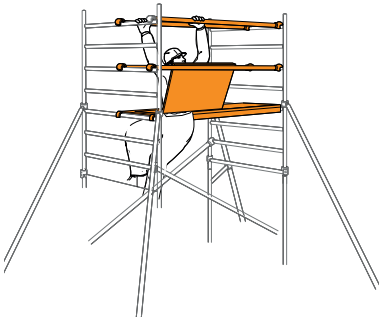

Assembly Procedure

Mobile towers - 850 3T method

Assembly for 850 towers


Always start building with the smallest height frames at the base of the tower:

Platform height in metres	Frame at base
1.7, 2.2, 3.7, 4.2, 5.7, 6.2, 7.7, 8.2, 9.7, 10.2, 11.7, 12.2	4 rung
2.7, 4.7, 6.7, 8.7, 10.7	6 rung
1.2, 3.2, 5.2, 7.2, 9.2, 11.2	8 rung

Where all 3 Heights are used in a tower, start with 4 rung frames at the base, with the 6 rung frames next and the 8 rung frames on top. Refer to the quantity schedules for detail. The procedure illustrated shows a tower starting with an 8 rung frame.


1 Insert adjustable leg/castor assemblies into end frames and lock the castors, (see diagram Step 1 - page 17). Base plates can be fitted to the adjustable legs if it is not necessary to move the tower. Fit two horizontal braces to the 850 end frames as shown in steps 2 and 3 for the 1450 tower procedure (page 18). Ensure that the frames are vertical and level by checking with a spirit level and setting the adjustable legs required.

2 Fit a trapdoor deck on the 4th rung. Fix the horizontal braces (red) as guardrails on the 6th and 8th rungs (2 and 4 rungs above the platform) on both sides of the tower.

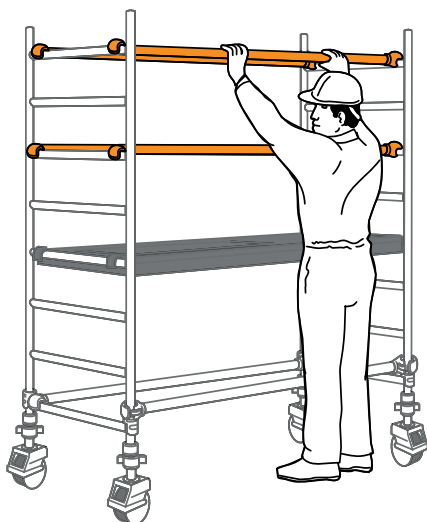


Assembly Procedure

3 Fit two diagonal braces (blue) in opposing directions between the 2nd and 6th rungs. Ensure the frames are vertical and level by checking with a spirit level and setting the adjustable legs as necessary. Fit the next pair of end frames and check the frame interlock clips are engaged. Fit stabilisers (see notes on page 30).

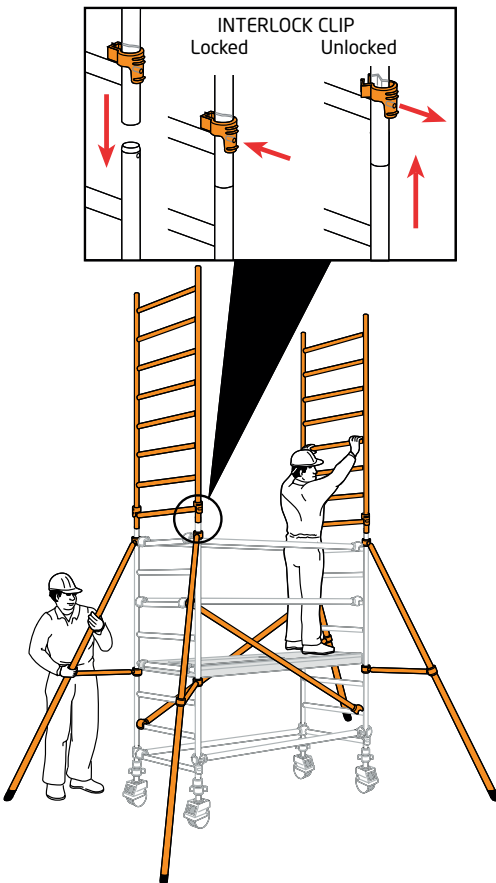


Assembly Procedure

- 4 Fit two pairs of diagonal braces in opposing directions between the 6th and 10th rungs and the 10th and 14th rungs. Locate a trapdoor deck on the 12th rung.

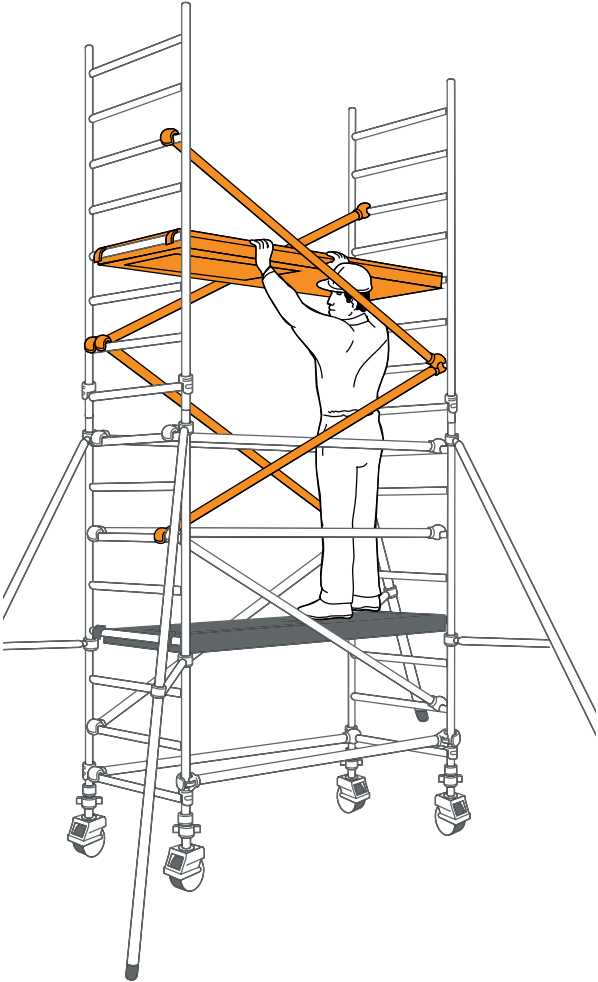

Assembly Procedure

- 5** Climb up the inside of the tower and from the protected position of the trapdoor, fit horizontal braces as guardrails (on both sides) to the 14th and 16th rungs (2 and 4 rungs above the platform in that order).

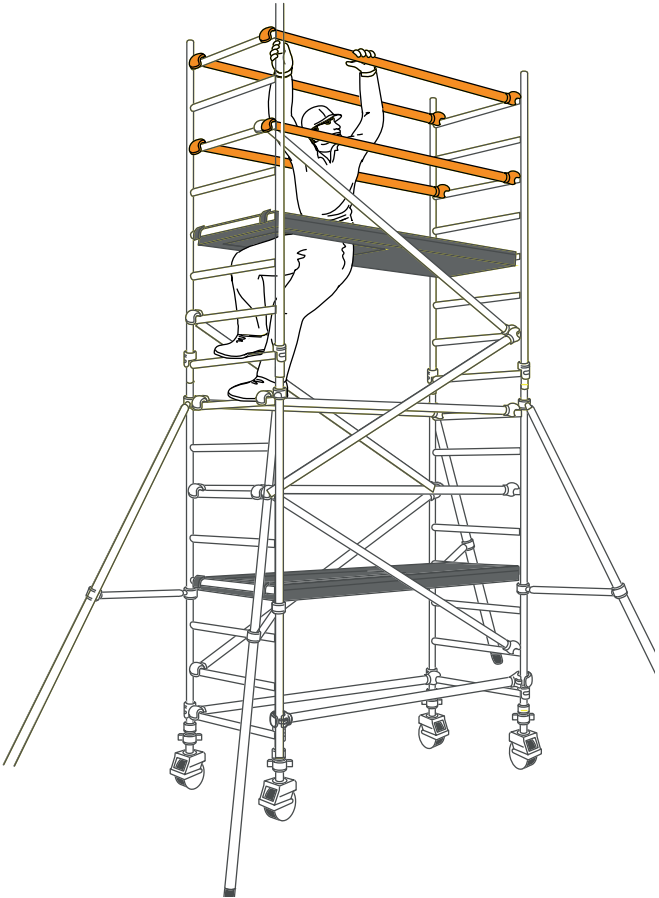

Assembly Procedure

6 Continue the procedure until the required working height is reached, adding additional pairs of end frames, diagonal braces and fitting trapdoor platforms, as shown on previous steps. At every platform level, add horizontal braces as guardrails at 2 and 4 rungs above the platform (in that order) on both sides of the platform. (as shown in Step 5).

Fit these guardrail braces from the protected trapdoor position. Do not climb onto the platform until all guardrails are in place.

At the final level, a further diagonal brace should be added on one side of the tower as shown.

Fit the toe boards (see instruction on page 29).

The tower is now complete.



Dismantling procedure


7 To take down the tower, reverse the building sequence. When removing guardrail braces, unlock the four claws furthest from the trapdoor and return immediately to the protected position within the trapdoor and then return immediately to the protected position within the trapdoor. You may then unlock the claws at the other ends of the guardrails to remove them from the tower.

Toe Boards

Mobile towers - 3T method

Fitting toe boards

Lock yellow plastic toe board clips over rung and deck claw as shown. Position as (A) on right hand deck claw. On other side of the working platform, position the clip as (B). Place 25mm thick toe boards into slots in toe board clips as shown.

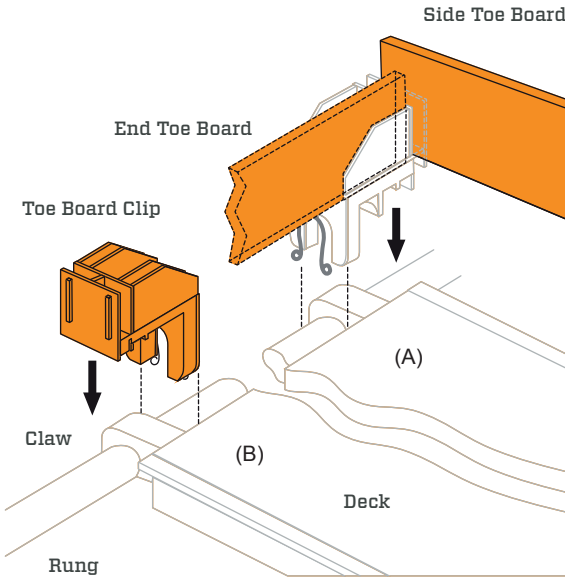

Stabilisers and Outriggers

Mobile towers - 3T method

Stabilisers


Attach one stabiliser to each corner of the tower as shown. Ensure stabiliser feet are equally spaced to form a square. SP10 and SP15 telescopic stabilisers must always be fully extended.

Position the lower clamp so that the lower arm is as close to the horizontal as possible. Adjust the position of the top clamp to ensure the stabiliser foot is in firm contact with the ground. Ensure clamps are secure.

Stabilisers are used when the tower is to be moved occasionally, frequent movement will require mobile outriggers.

When moving the tower, adjust the top clamps to lift the four stabiliser feet a maximum of 25mm off the ground and then unlock the castor brakes. After moving, ensure all four stabiliser feet are repositioned in firm contact with the ground.

Stabiliser dimensions

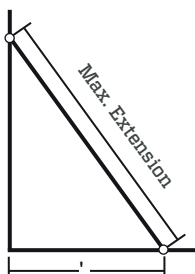

	y
SP7	1227
SP10	2241
SP15	2757

Outriggers

For information on mobile outriggers please consult your supplier.

For further information about this product or any other products and services, please contact:

The Causeway, Maldon,
Essex, CM9 4LJ,
United Kingdom

☎ +44 (0)1621 745900

☎ +44 (0)1621 859845

✉ uk.customercare@wernerco.com

🌐 bossaccesstowers.com

Members of:



PN03302700

©2017 WernerCo Rev. 10/17